



INSTALLATION INSTRUCTIONS

Part Number: TB-9016

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

* FREE K&N® decal To register your warranty, please see us online at knfilters.com/register. FREE K&N® decal *

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter can last many seasons. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N® air filter seals properly.

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

INSTALLATION:

1. Remove the stock air filter.
2. Carefully clean the inside of the air box and sealing surfaces.
3. Due to imperfections in the air box sealing surfaces, a light bead of 99-0703-1 air filter sealing grease (supplied) must be applied to the sealing edge of the K&N® air filter as shown. (Fig. 1)
4. Install the K&N® air filter in the stock filter tray and slide it into the air box. (Fig. 2)
5. Wipe any excess grease off, once the filter has been pushed into place. (Fig. 3)
6. Reinstall the filter cover.

Note: To remove the K&N® filter, it may be necessary to pry gently with a screwdriver on the filter tray as shown. (Fig. 4)

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.



Fig. 1



Fig. 2



Fig. 3



Fig. 4

CLEANING:

K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. Depending on your driving conditions, we recommend cleaning your air filter every 50,000 miles. To clean and re-oil, purchase our filter Recharger® service kit, part number 99-5050 or 99-5000 and follow the easy instructions.