



INSTALLATION INSTRUCTIONS

Part Number E-2014

This filter fits: **See current catalog for applications**

FREE K&N DECAL** To register your warranty, please see us online at knfilters.com/register. **FREE K&N DECAL

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modifications will be required. However the following procedures **MUST** be followed to ensure the proper fit and seal of the K&N *Filtercharger*[®].

1. Remove the screws that fasten the airbox lid to the airbox base.
2. Remove the airbox lid from the vehicle, then remove the filter bracket. (See fig. 1)
3. Remove the dirty air filter.
4. Wipe out any dirt or dust that may be inside the air filter housing.
5. Install the K&N **FILTERCHARGER** into the airbox base by first applying gentle pressure to the base side first. (See fig. 2)
6. Once filter is installed in the base, re-install the filter bracket and tighten the screw down completely. (See fig. 3)
7. Install the airbox lid back onto the airbox base, make sure that the filter seats properly in base.
8. Re-install the airbox lid and re-fasten the screws. (See fig. 4)

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

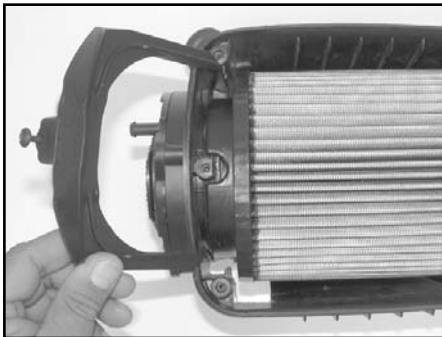


Fig. 1

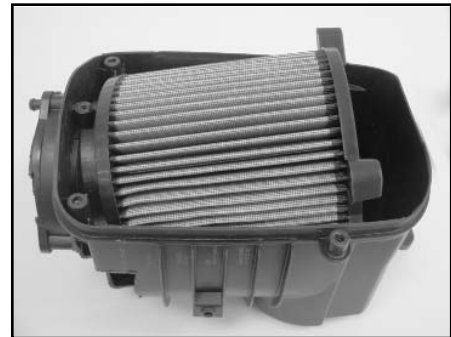


Fig. 2

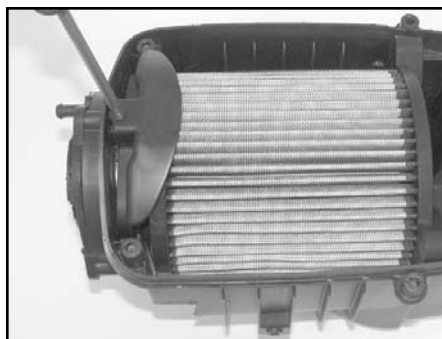


Fig. 3



Fig. 4