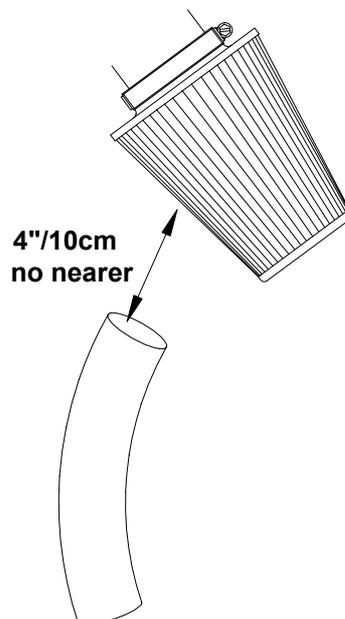


PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE FITTING THIS KIT.**If you have a problem, however small, call our Technical Department.**

Tel:- 01925 636950. Fax:- 01925 243111. Mon - Thurs 8.30am - 5pm.

1. Remove the complete air box assembly from the air flow meter (**AFM**).
2. Using vice grips remove the top locating pin from the **AFM**.
3. Fit the new angled brackets with new screws to the bottom left and right hand holes on the **AFM**, (removing the original screws). Fit to the original air box mounting. Fit the filter **but don't overtighten clip**.
4. **Carefully** expand the cold air hose to approx 35"/90cm.
5. Feed the cold air hose downwards keeping it close to the chassis rail and position in it the air intake section by the foglight.
6. Using a plastic tie, attach the hose to the bracket on the inner wing, as **drawing A**, leaving it approx **4"/10cm** from the air filter **no nearer**. Using the other two plastic ties attach the air hose to any convenient point.
7. **Tuning. CAT. Cars**, no adjustments are required.
Non CAT. Cars, We suggest that a simple **CO** test is carried out, as some cars may be weaker than the standard setting. The **CO** figure should not be more than **0.5%** above the recommended figure.
8. **Filter Maintenance.**
Under normal conditions clean and reoil the filter at approx 40,000 miles / 65,000 km.
Use only K&N Cleaner and Oil and follow the instructions carefully.

K&N Filters are pre-oiled ready to fit.**Drawing A****The advantage's of K&N's cold air intake system**

Cooler air being denser will show positive improvements in power over filter systems that draw hot air from the engine bay.

This Kit Should Contain :-

- 1 x Air Filter.
- 1 x Cold Air Hose Assembly
- 1 x Instruction Sheet
- 1 x Instruction Pack:
 - 1 x K&N Window Sticker
 - 1 x Filter Maintenance Sheet
 - 1 x Million Mile Warranty
 - 1 x Leaflet
- 1 x Fixing Kit :-
 - 2 x Brackets.
 - 3 x Plastic Cable Ties (14" long).
 - 2 x 5mm Spring Washers.
 - 2 x M5 x 20mm Screws.

**IMPORTANT INSTRUCTIONS
FOR ROUND ENTRY
CLAMP ON AIR FILTERS**

Gently tighten the hose clip to the point where the filter will just rotate on the pipe or intake flange. Reposition the K&N logo straight, then **give the clip two turns i.e. 360 , no more.**

FITTING YOUR OWN 57i KIT

If not, **it is essential** that the person fitting the kit (e.g. mechanic) **carefully follows these particular instructions** even if he has fitted K&N kits before. This will save you both time and money. Kits incorrectly fitted may show a loss in performance e.g. the positioning of the essential cold air hose, (flexi expandable and rubber hoses are used).

A final check under the bonnet, by yourself, with the instructions, would seem sensible.