



## Part Number 57- 0188 INSTALLATION INSTRUCTIONS

Alfa Romeo 145 1.6L, 1.8L & 2.0L 16v Twinspark 1997-2001

Alfa Romeo 146 1.8L L4 1997-2001

Alfa Romeo 146 2.0L L4 1995-2001

Alfa Romeo 155 1.6L & 1.8L L4 1996-1997

Alfa Romeo 155 2.0L L4 1995-1997

1. Take the key from, the ignition and remove the negative battery terminal.
2. Loosen the hose clamp and disconnect the intake hose from the airbox lid, unscrew and remove the air box lid as shown. (Fig. 1)
3. Fit the L-bracket to the bolt on the strut top as shown do not fully tighten at this point. (Fig. 2)
4. Fit the small metal tube halfway into the filter and secure using the # 48 clip supplied. Fit the long metal tube halfway into the notched end of the intake hose, fit the filter assembly into the Intake hose and secure using one of the #44 hose clips supplied. (Fig. 3)
5. Fit the filter assembly into the intake hose and firmly tighten the original hose clip. (Fig. 4)
6. Slide the new bracket under the #44 hose clip as shown; adjust to give maximum clearance, (**Ensure the filter will not foul the bonnet stay**) firmly tighten the clip and bracket. (Fig. 5)
7. Carefully expand the flexi cold air hose and pierce/drill 2 holes in one of the plastic ends.
8. Feed the pierced end of the cold air hose to the front lower grill and secure in position as shown using the cable ties supplied. (Fig. 6 & 7)
9. Position the end of the cold air hose towards the filter to finish 4"/10 away secure in position to the air box base using one of the cable ties supplied. (Fig. 8)
10. Reconnect the negative battery terminal.
11. Carry out a final height / alignment check of the kit, installation is now complete.

**Parts list:**

- 1 x Air Filter Element.
- 1 x Rubber Intake Hose
- 1 x Cold Air Hose Assembly
- 1 x Literature Pack
- 1 x Fixing Kit:-
  - 2 x # 44 Hose Clips
  - 1 x # 48 Hose Clip
  - 1 x Long Metal Tube
  - 1 x Short Metal Tube
  - 1 x Powder Coated L-Bracket
  - 2 x Plastic Ties

**WARNING:** Before starting the engine carry out a final fitment check of the K&N performance kit. It will be necessary for all intake systems to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions or proper maintenance may void the warranty.

**FILTER MAINTENANCE:** K&N suggests checking the filter periodically for excessive dirt build-up. When the element becomes covered in dirt (or once a year), service it according to the instructions on the Recharger service kit available from your K&N dealer, part number 99-5003EU.

For cleaning instructions please visit our website: [www.knfilters.com/cleaning](http://www.knfilters.com/cleaning)



Fig. # 1

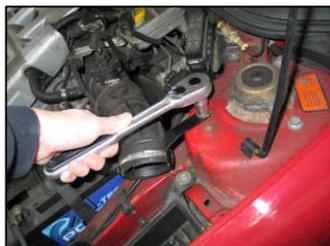


Fig. # 2



Fig. # 3

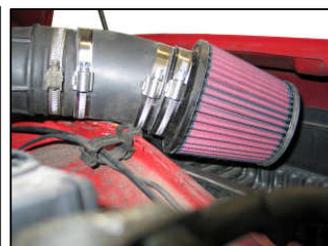


Fig. # 4



Fig. # 5



Fig. # 6



Fig. # 7



Fig. # 8

