



Installation Instructions

For Part Numbers:

- 350-160 700-458 Airaid Oiled Media Filter
- 351-160 701-458 SynthaMax Dry Media Filter - Red
- 352-160 702-458 SynthaMax Dry Media Filter - Black
- 353-160 703-458 SynthaMax Dry Media Filter - Blue

2005-08 Dodge Magnum R/T 5.7L V8

2005-08 Chrysler 300C 5.7L V8

2006-08 Dodge Charger R/T 5.7L V8

INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE AIRAID.COM FOR CARB STATUS ON EACH PART FOR A SPECIFIC VEHICLE.



Component Identification

- | | | |
|-----|------------------------|---|
| 1. | Airaid Premium Filter | 1 |
| 2. | MAF Air Dam Panel | 1 |
| 3. | Air Dam Panel | 1 |
| 4. | Weather Strip 25 1/2" | 1 |
| 5. | 1/2" x 3 1/2" Hose | 1 |
| 6. | 1/2" to 1/2" Connector | 1 |
| 7. | #6 Phillips Screw | 4 |
| 8. | #6 Nut | 4 |
| 9. | #6 Flat Washer | 4 |
| 10. | Airaid Decal | 1 |

Full color instructions can be viewed on our web site at Airaid.com. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.




1. Loosen the hose clamp on the intake tube.



2. Disconnect the breather hose from the factory air box lid.




3. Remove the factory air box lid and flat panel filter. (*Note: Retain the factory air box base.*)

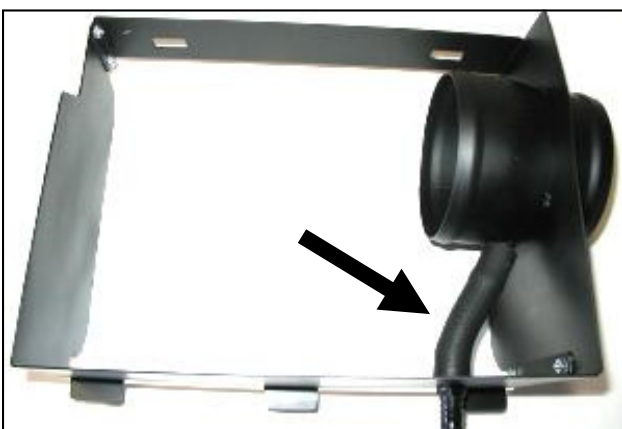

4. Install the supplied 1/2" hose on the Airaid CAD nipple. Assemble Airaid CAD panels using supplied hardware. Install supplied 1/2" nylon union through the panel hole into the 1/2" hose.



5. Install the Airaid CAD in place of the factory air box lid. Tighten factory hose clamp. Apply the Airaid Foil Decal onto the Panel as shown.

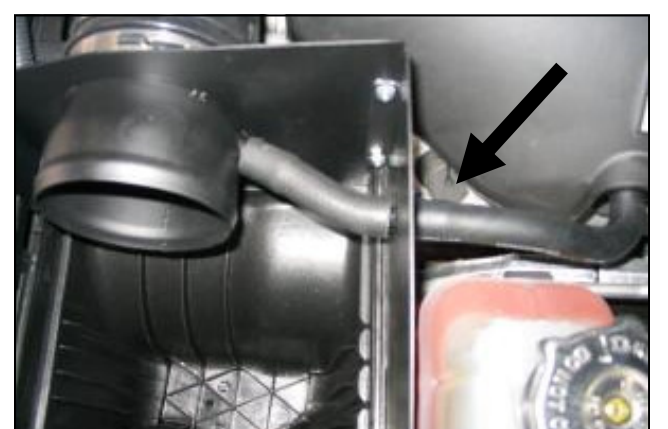

6. Connect the factory breather hose to nylon 1/2" union.



7. Install Airaid filter on the end of the intake tube. Install weather strip on CAD. (*Note: Start from one end of air box and work your way to the other end.*)

8. Double check your work to be certain that all nuts, bolts, and clamps are securely fastened.

Thank you for purchasing the Airaid Intake System. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. WATER INGESTION IS THE DRIVERS RESPONSIBILITY! The air filter is reusable and should be cleaned periodically.

FILTER IDENTIFICATION

700-458 Airaid Oiled Media
702-458 Airaid SynthaMax Dry Media - Black

701-458 Airaid SynthaMax Dry Media - Red
703-458 Airaid SynthaMax Dry Media - Blue

**For your Oiled media filter
we suggest using the AIRAID
Filter Tune-Up Kit!**

SynthaMax[®]

Do Not Oil



Synthamax Air Filters do not require oil. Service air filter as needed by cleaning with common non-petroleum all-purpose household cleaner and water. Simple Green[®], Formula 409[®] or equivalent works great. Apply cleaner to outside of air filter and allow to soak. Then flush filter clean from the inside out with a garden hose and repeat steps if necessary. Do not apply high pressure water or air to clean filter. Allow filter to air dry and reinstall.

P/N 790-551 Aerosol Spray
P/N 790-550 Squeeze Spray



INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE AIRAID.COM FOR CARB STATUS ON EACH PART FOR A SPECIFIC VEHICLE.