



## Installation Instructions

For Part Number: 350-993

6.1L Hood Scoop Option for Airaid intake systems:

350-193      350-199

351-193      351-199

352-193      352-199

353-193      353-199


**NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.**

See AIRAID.COM for CARB status on each part for a specific vehicle.

### Component Identification

- |                                   |   |
|-----------------------------------|---|
| 1. Hood Scoop Tube                | 1 |
| 2. 8-32 x 3/8" Button Head Screws | 3 |
| 3. #8 Flat Washer                 | 3 |
| 4. 1/4 - 20 Button Head Screw     | 1 |
| 5. 1/4" Flat Washer               | 1 |
| 6. L-Bracket                      | 1 |
| 7. Foam Hood Seal                 | 1 |

Full color instructions can be viewed on our web site at Airaid.com. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

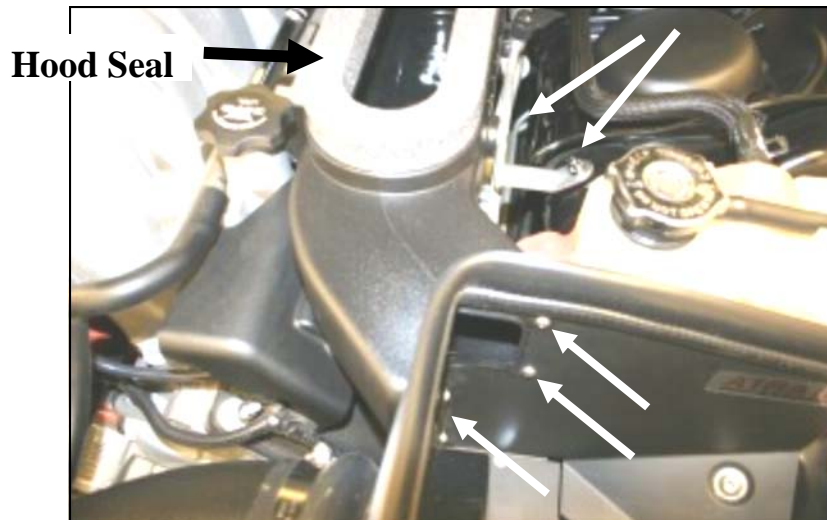

Install the hood scoop into the **CAD** using three 8-32 x 3/8" button head screws (#2), and three #8 flat washers (#3), leave loose. Install the L-bracket (#6) over the stud on the fender, and bolt it to the hood scoop using the 1/4-20 button head bolt (#4), and 1/4" flat washer (#5). Replace the factory nut on the stud, adjust for fit, and tighten all bolts, nuts, and screws. Apply the Foam Hood Seal as shown.