



**Installation Instructions**  
**Part Number 400-602**  
**Poweraid Spacer For 05-07**  
**Ford 6.0L Powerstroke Diesel**

Thank you for purchasing the PowerAid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Your PowerAid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

*Thank you for selecting AIRAID.*



**INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE  
LEGAL. SEE AIRAID.COM FOR CARB STATUS ON EACH  
PART FOR A SPECIFIC VEHICLE.**

**Parts List**


AIR-KIT602PA Aluminum Plate (1)

**Tools Needed**

5/16" socket and wrench

1. **Disconnect the negative battery cable!**
2. Loosen clamp at intake manifold leaving clamp on plastic tube.
3. Slide the plastic tube back and insert power plate into tube.
4. Reinstall the plastic tube making sure the power plate is engaged in manifold while locating and tightening the hose clamp.
5. When installing the power plate in the intake manifold, face the power plate using the illustration below.
6. Before tightening the intake manifold clamp, be sure that the power plate has engaged both the intake manifold and plastic intake tube. **\*\*The outside diameters of the power plate will fit the inside diameters of the intake manifold and the plastic intake tube.**
7. Reconnect negative battery cable. Enjoy!

Included with your Poweraid Spacer is a sticker with a **California Air Resources Board (C.A.R.B.) Executive Order (EO) number**. This sticker must be placed in plain view inside of the engine compartment. Failure to do so may prevent you from passing a smog inspection.

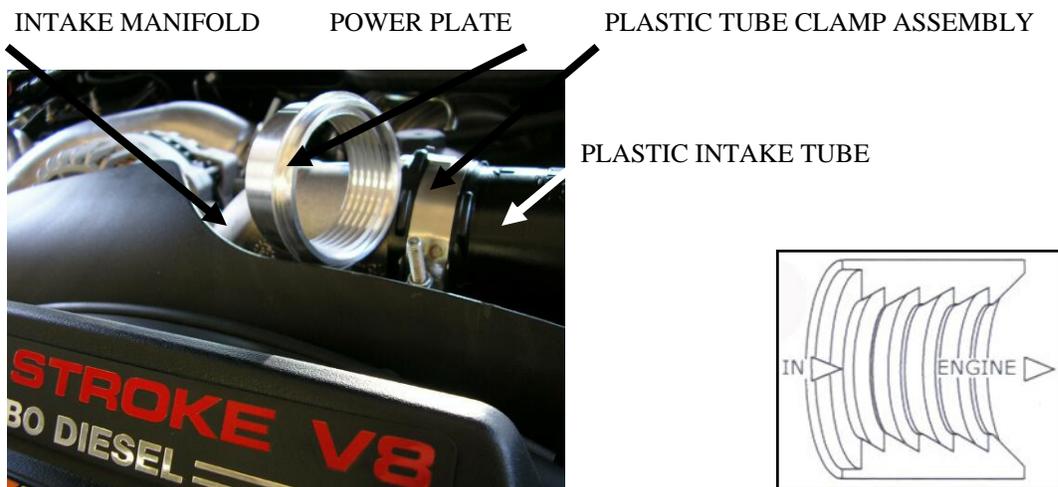

*The sound of power...The "whistle" means its working!*

Contact your nearest AIRAID dealer for an AIRAID Intake System for your car, truck or SUV.

AIR-I40602A  
Rev. 01.03.17