



INSTALLATION INSTRUCTIONS

PART NUMBER: YA-1009

This filter fits:

SEE CATALOG FOR CURRENT APPLICATIONS

* FREE K&N® decal To register your warranty, please see us online at knfilters.com/register. FREE K&N® decal *

Congratulations, you have just purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N® air filter seals properly.

INSTALLATION:

1. Remove the stock air filter.
2. Carefully clean the channel in the air box where the air filter seals.
3. Install the K&N® air filter (Fig. 1) with the lip seal on the air filter facing towards the throttle body assembly. (Fig. 2)
CAUTION! The K&N® air filter will not seal correctly if it is installed with the lip seal facing towards the front of the motorcycle.
4. Make sure the K&N® air filter is completely seated into the channel of the air box. (Fig. 3)
5. Reinstall the air box lid making sure the K&N® air filter sits in the channel before completely closing.
6. Tighten screws.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

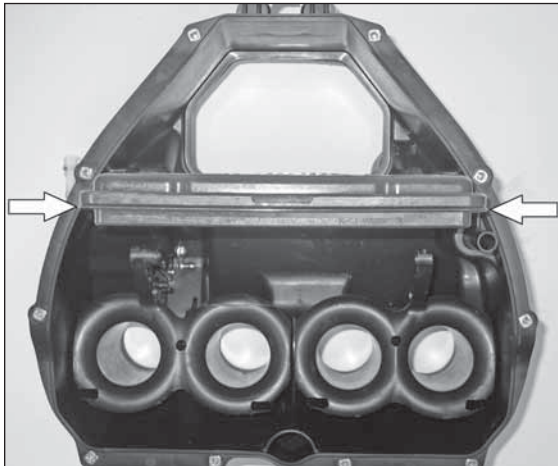


Fig. 1

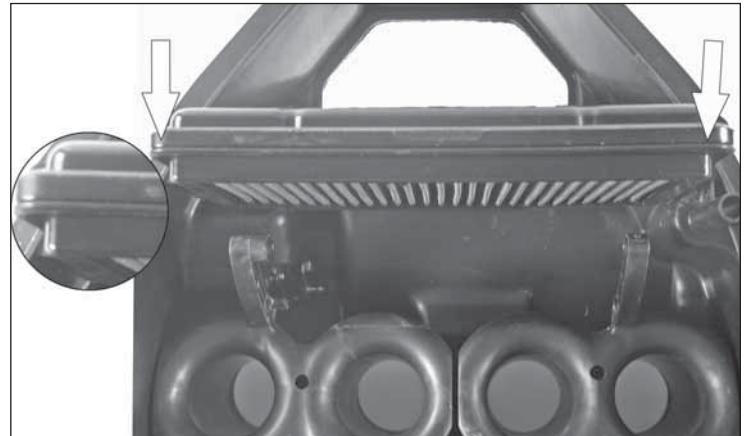


Fig. 2

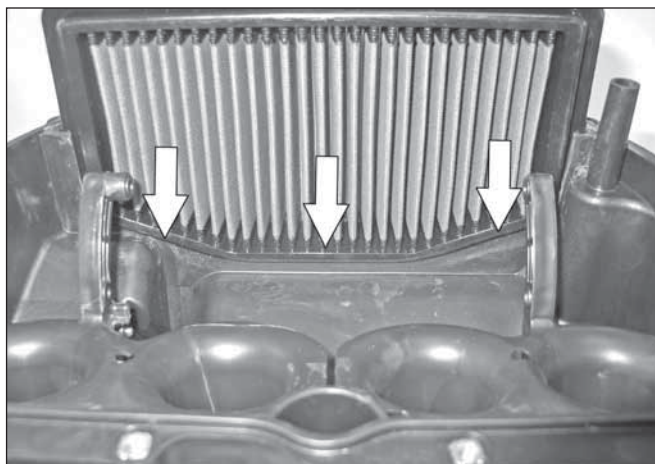


Fig. 3